Assembly Instructions & User's Manual
Steel Mesh Swivel Rocker

FSMVPT2069

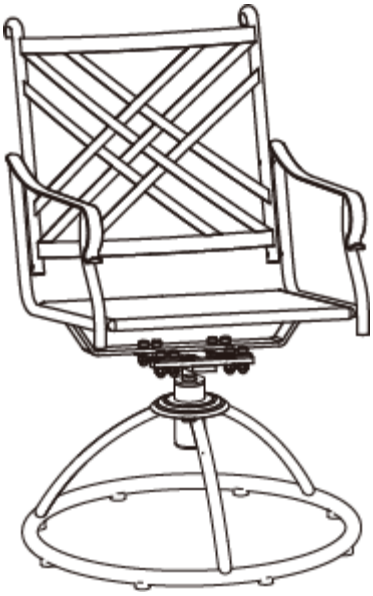

Please keep this instruction manual for future reference

Customer Service: (888) 922-2336, 7:00am to 12:00am Everyday CST

Live Chat @ Academy.com: 24/7

Made in China

Table of Contents

Warnings……..…2
Tools and Parts……...2
Assembly Instructions……....4
Care and Maintenance……..……7
Warranty Information…….....8

Note: Before beginning assembly of product, make sure all parts are present. Compare parts with package content list and hardware contents above. If any part is missing or damaged do not attempt to assemble the unit. Contact customer service for replacement parts.

Warnings

This product requires adult assembly. Keep screws and parts away from children.

Please read this manual before assembly or use.

Do not tighten nuts or screws until assembly is complete.

Before assembly, check the package contents carefully to ensure that all parts are included.

For missing or replacement parts, contact customer service at (888) 922-2336.

SKU#: 102689857 Style#: FSMVPT2069

Tools Required (Included)

1	Wrench	
2	Allen wrench	

Parts List

A	Right Arm		2
B	Left Arm		2
C	Chair Seat		2
D	Chair Back		2
E	Base		2
F	T-type Connector		2

Hardware

G	Steel Plate		4
H	M6 x 35mm Bolt		16
I	M8 x 30mm Bolt		8
J	M6 Washer		16
K	M8 Washer		16
L	M8 Nut		8
M	M6 Bolt Cap		16
N	M8 Nut Cap		8
O	M8 Bolt Cap		8

Assembly Instructions

Step 1:

Attach chair seat (C) to right arm (A) and left arm (B) at position 1 & 2 & 3 and 4, using bolt 4X(H) and M6 washer 4X(J).

Attach the chair back (D) to right arm (A) and left arm (B) at position 5 & 6 & 7 and 8, using bolt 4X(H) and M6 washer 4X(J).

Tighten these bolts using the included

Allen wrench (Q), then cover them with M6 End caps 8X(M).

NOTE: Insert the bolt and washer from

the chair seat/chair back to the right/left arms.

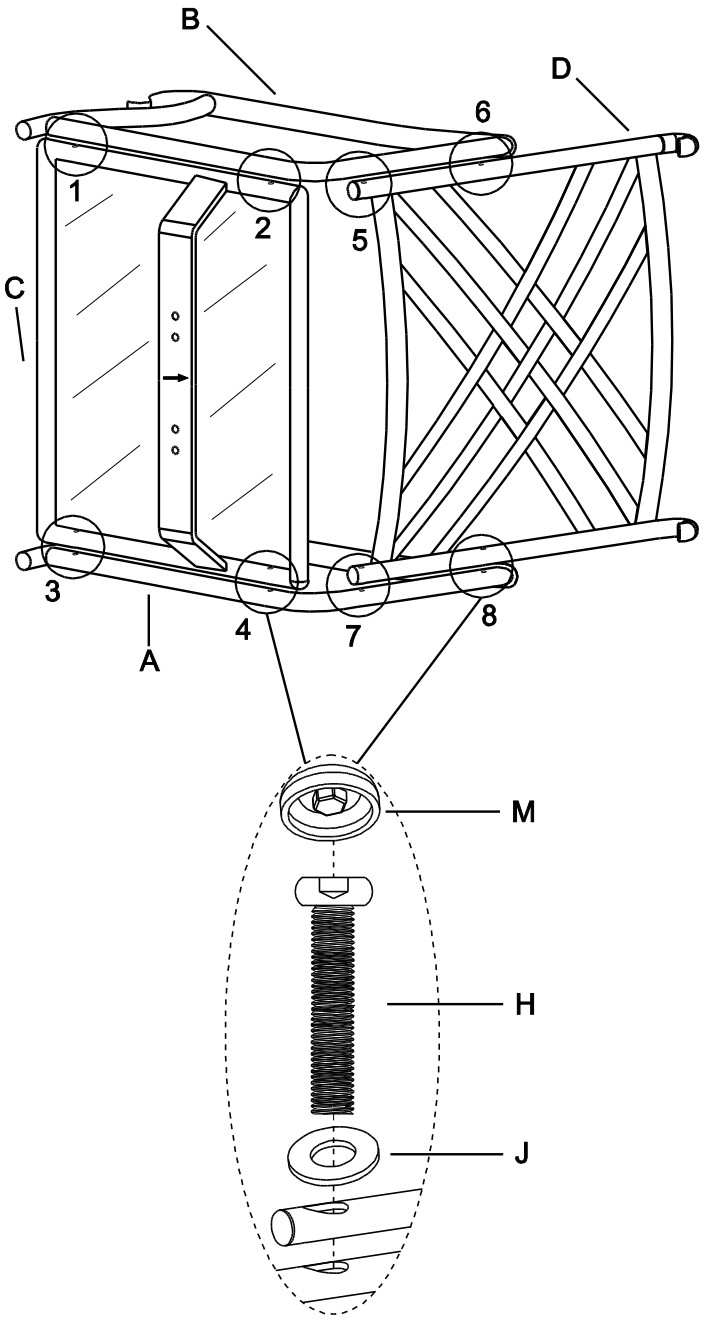

Assembly Instructions

Step 2:

When assembling the chair, make sure the direction of the arrow is towards the back of the chair.

Attach T-type connector (F) to the bottom of chair seat (C) as shown.

Insert the bolt 4X(I) and washer 4X(K) from chair seat (C) to T-type connector, and a steel plate (G), M8 washer 4X(K) and M8 Nut 4X(L) as shown.

Tighten bolts and nuts using the included wrench (P). You may need extra adjustment with the wrench in this step.

Cover bolts with M8 bolt end caps 4X(O), nuts with M8 nut end caps 4X(N).

NOTE: Please make sure both arrows in chair seat and T-type connector are keep in the same direction before assembling.

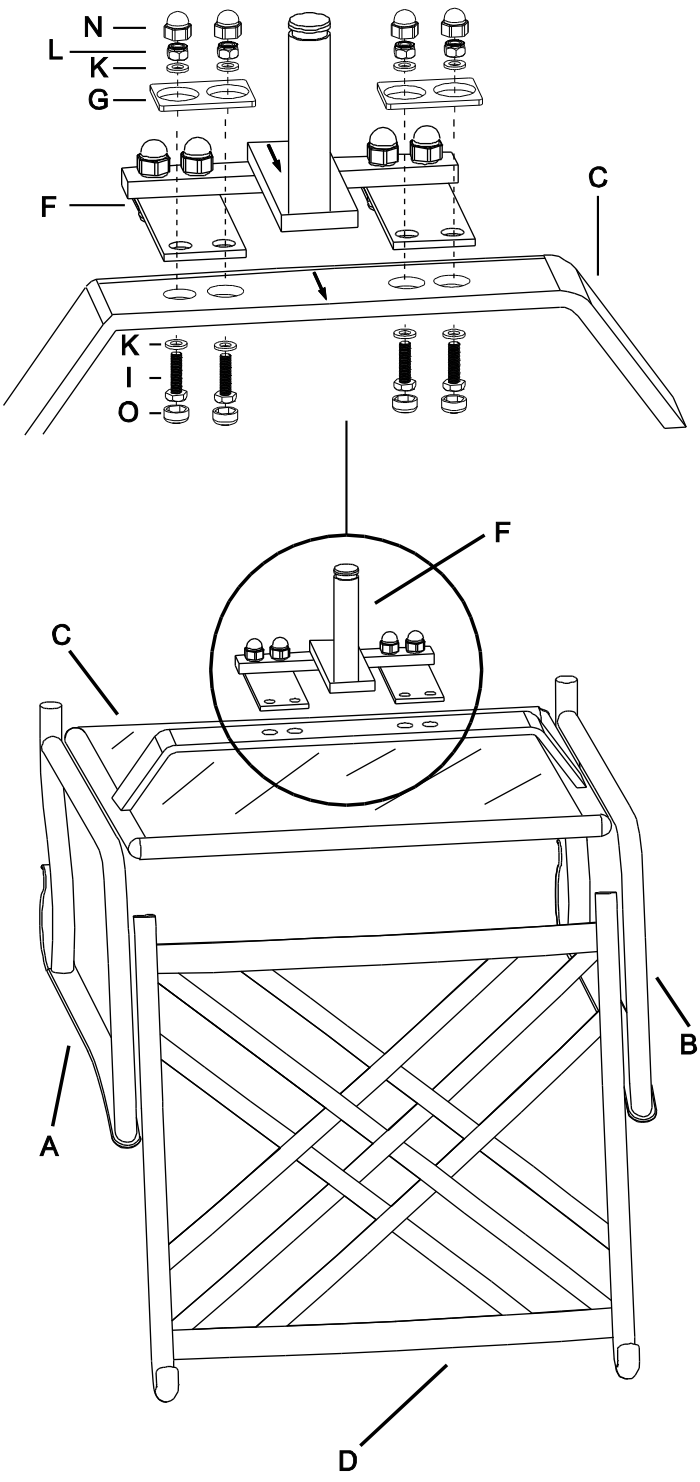

Assembly Instructions

Step 5:

Insert the upper part of the chair all the way into the base (E).

Repeat all steps to assemble the second swivel rocker.

Your swivel rocker is now ready to use.

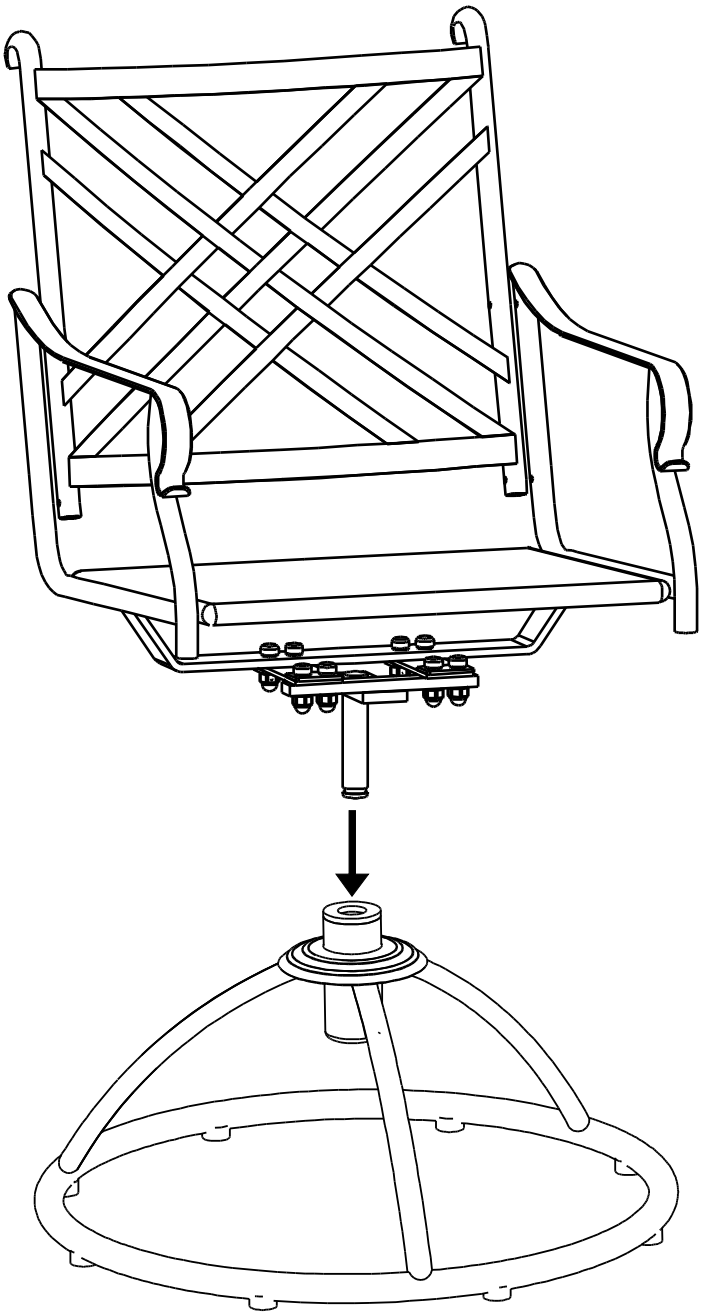

Care and Maintenance

The product should be cleaned on a regular basis to promote safe use and prolong product life.

Wipe the frame with a smooth damp cloth and air dry.

Do not use abrasive cleaners as they may damage or scratch the surface paint.

Do not leave this product in harsh weather conditions for extended periods.

For extended life, the product should be stored indoors or covered during prolonged periods of non-use.

Storing in a dry location will help prevent rust.

Warranty Information

The appliance has been manufactured under the highest standards of quality and workmanship. We warrant to the original consumer purchaser that all aspects of this product will be free of defects in material and workmanship for one year from the date of purchase. A replacement for any defective part will be supplied free of charge for installation by the consumer. Defects or damage caused by the use of other then genuine parts are not covered by this warranty. This warranty shall be effective from the date of purchase as shown in the purchaser receipt.

This warranty is valid for the original consumer purchaser only and excludes industrial, commercial or business use of the product, product damage due to shipment or failure which results from alteration, product abuse, or product misuse, whether performed by a contractor , service company , or consumer. We will not be responsible for labor charges and/or damage incurred in installation, repair or replacement nor for incidental or consequential damage.